

 
VHS to DVD Conversion (“dubbing”) Instructions: Quick Guide

Please read this entire page first before attempting to convert any media!

1. If not already on, turn on power for the Sanyo Recorder (and its monitor).




2. Insert the VHS tape to be converted into the VCR.

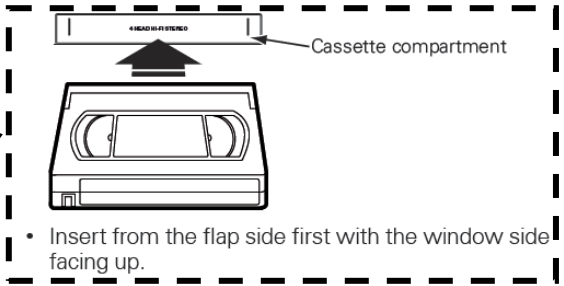


3. The VHS tape should automatically begin playing. Press the pause button on the remote control to pause the tape at the point where you want to begin conversion.



4. Insert a blank DVD into the disc tray.

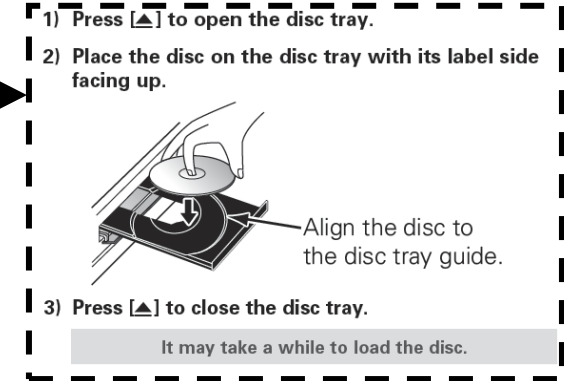



5. Press the D.DUBBING button on the remote control to begin conversion.

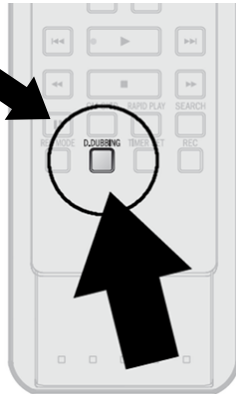

6. When the VHS tape reaches the end, dubbing will stop and the VHS tape will automatically rewind. You may also manually stop the conversion process at any time by pressing the stop button on the remote control.



7. To finish the conversion process and make the DVD playable on other DVD players, you will need to “finalize” the DVD (see page 42 of the manual for more options).

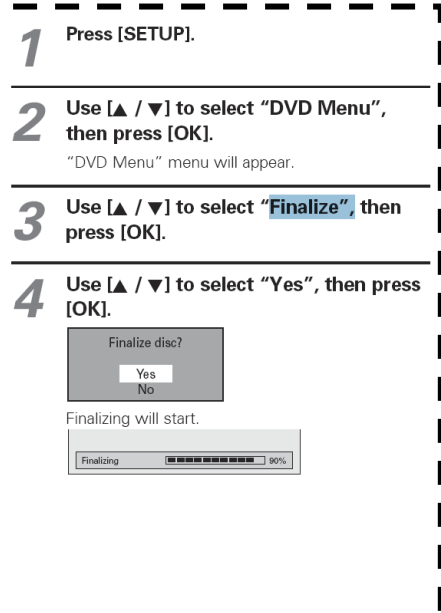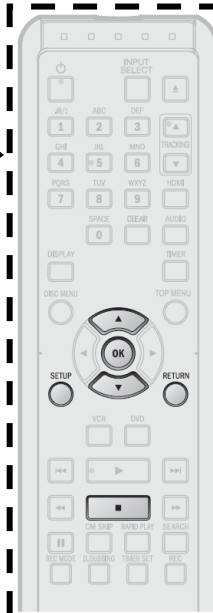

IMPORTANT NOTES

- Only “-R” or “-RW” DVDs may be used for dubbing; “+R” and “+RW” will NOT work (see page 27).
- The most common record mode for DVDs is “SP” (2 hours), but other options are available and may be preferable depending on the length of the VHS tape to be converted (see page 27).

➤ There are additional options for auto chapter, sound quality, and video aspect ratio (see page 28). Also be sure to verify dubbing mode (pages 39 & 40). **YOU MAY WANT TO CHECK THESE SETTINGS BEFORE STARTING**; these settings may have been changed by previous users, so don’t assume they are already set the way you’d want them. You are responsible for the results of your own media conversion.